 


LAU BLOWER PARTS

 
CARTRIDGE BEARING

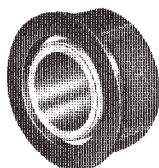


SEALED BEARING




PILLOW BLOCK BEARING

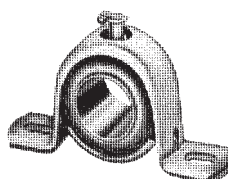


THRUST SPACERS

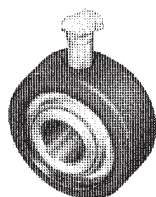 

OIL BEARING

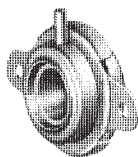 

FLANGE BEARING

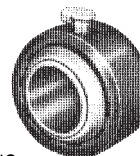 

RANDALL BEARING



THRUST COLLARS

LAU BLOWER BEARINGS AND PARTS

FLANGE TYPE BEARINGS

Reoilable Porous Sintered Bronze Bushing

<u>DESCRIPTION</u>	<u>Unit</u>	<u>Qty.</u>	<u>Price</u>
3/4" Flange Type Bearing-Mark I - 38-2082-01	Pair	1	

PILLOW BLOCK BEARINGS

Heavy Neoprene Cushioned
Reoilable Porous Bronze Bushing

<u>DESCRIPTION</u>	<u>Unit</u>	<u>Qty.</u>	<u>Price</u>
3/4" Pillow Block Bearings - 38-2086-01	Pair	1	
1" Pillow Block Bearings - 38-2087-01	Pair	1	
1" Pillow Block Bearings - HD - 38-2093-01	Pair	1	

CARTRIDGE TYPE BEARINGS

Sintered Bronze Bushings
Steel Bearing Caps, Factory Lubricated

<u>DESCRIPTION</u>	<u>Unit</u>	<u>Qty.</u>	<u>Price</u>
3/4" Mark III Cartridge Bearing - 38-2272-01	Pair	1	
1" Mark III Cartridge Bearing - 38-2091-01	Pair	1	
3/4" Mark IV Cartridge Bearing - 38-2090-01	Pair	1	

LAU OIL TYPE BEARINGS

With Insulator - Self Aligning
Self Oiling Bronze Bushing - Drive Type Oil Cup

<u>DESCRIPTION</u>	<u>Unit</u>	<u>Qty.</u>	<u>Price</u>
3/4" Lau Oil Bearing & Insulator - 38-2442-01	Pair	1	
1" Lau Oil Bearing & Insulator - 38-2442-02	Pair	1	

LAU SEALED TYPE BEARINGS

With Insulator - Self Aligning Porous
Bronze Sleeve - Factory Lubricated

<u>DESCRIPTION</u>	<u>Unit</u>	<u>Qty.</u>	<u>Price</u>
5/8" LauPak Sld.Bearing-Insul. - 38-2443-01	Pair	1	
3/4" LauPak Sld.Bearing-Insul. - 38-2443-02	Pair	1	
1" LauPak Sld.Bearing & Insul. - 38-2443-03	Pair	1	
3/4" LauPak Sld.Brg.& Insul. - 38-2694-01	Pair	1	

RANDALL OIL TYPE BEARINGS

With Insulator - Self Aligning - Self Oiling
Sintered Bronze Bushing - Drive Type Oil Cup

<u>DESCRIPTION</u>	<u>Unit</u>	<u>Qty.</u>	<u>Price</u>
5/8" Oil Randall Type - Insul. - 38-2404-01	Pair	1	
3/4" Oil Randall Type - Insul. - 38-2450-01	Pair	1	
1" Oil Randall Type Bearing - 38-2449-01	Pair	1	

THRUST SLEEVE & SPACER KIT

Plastic Sleeve with Assortment of Spacers
For Blower Adjustment

<u>DESCRIPTION</u>	<u>Unit</u>	<u>Qty.</u>	<u>Price</u>
3/4" Thrust Sleeve Kit - 38-2203-01	Each	1	

THRUST COLLAR KIT

With Allen Head Set Screws and Thrust Washers

<u>DESCRIPTION</u>	<u>Unit</u>	<u>Qty.</u>	<u>Price</u>
5/8" Thrust Collar Kit - 38-2431-01	Each	1	
3/4" Thrust Collar Kit - 38-2206-01	Each	1	
1" Thrust Collar Kit - 38-2207-01	Each	1	

THRUST SPACER KIT

Spacer Assortment for Blower Adjustment

<u>DESCRIPTION</u>	<u>Unit</u>	<u>Qty.</u>	<u>Price</u>
5/8" Thrust Spacer - 38-2491-01	Each	1	
	Pkg.	12	
3/4" Thrust Spacer - 38-2491-02	Each	1	
	Pkg.	12	
1" Thrust Spacer - 38-2491-03	Each	1	
	Pkg.	12	

VIBRO-PADS

Rubber Pads Eliminate Blower Vibration & Noise

<u>DESCRIPTION</u>	<u>Unit</u>	<u>Qty.</u>	<u>Price</u>
Rubber Vibro-Pads (Grommets) - 38-2209-01	Each	1	
	Pkg.	12	

